



Canon EOS 30 Top Panel Replacement

How to separate the top panel from the camera body.

Written By: Sterling Vinson



INTRODUCTION

The top panel can be safely separated from the camera body, but it will remain attached by several wires and a ribbon cable. Separating the top panel allows access to several important components.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Front Panel



- Remove two 4.8 mm black screws on the front of the camera.

Step 2



- Remove one 4.3 mm black screw under the lens ring and one 4.8 mm black screw on the bottom of the camera.

Step 3



- Remove one 4.8 mm black screw on the left side.

Step 4



- Remove the front panel by lifting out the side opposite the grip.

Step 5 — Top Panel



- Slide the outer eyepiece upward to remove it.

Step 6



- Remove two 4.75 mm Phillips #00 screws from top of camera.

Step 7




- Remove four 4.3 mm Phillips #00 screws from back of camera.


Step 8



- Slowly separate top panel from camera by pushing up.
- ⚠ Be careful, as top panel is still attached by wiring and ribbon cable to the camera.

Step 9

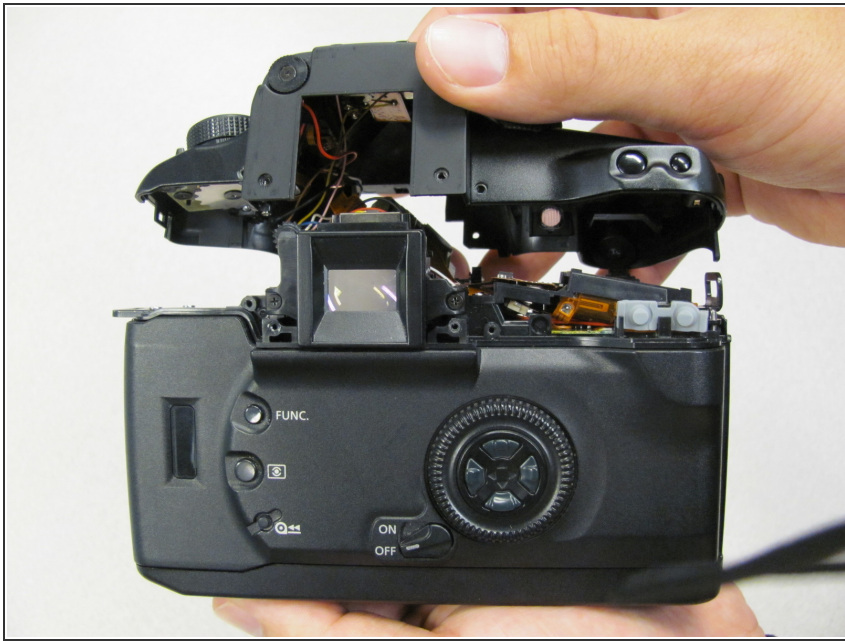

 Separating the top panel too far can damage the connecting wiring.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-11-19 02:31:38 AM.